

 

 
 
 
Assembly Instructions for TV Trolley Stand



Thanks for choosing our stand. This stand was designed for mounting flat panel televisions weighing up to 60 kg. The height of TV can be easily adjusted.






Safety Warning: If you do not understand these directions, or have any doubts about the safety of the installation, please call a qualified contractor. Check carefully to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. We can not be liable for damage or injury caused by incorrect mounting, incorrect assembly, or incorrect use.



Required Tools: Phillips screw driver.

Supplied Parts

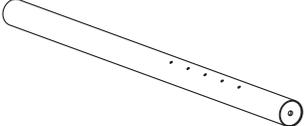No.	Picture	Description	Quantity
1		Stand Base Plate	1
2		Adjustable Foot	4
3		Pole	2
4		M8x40 Hex Head Bolt M8x20 Washer	2
5		M8 spring washer	2
6		Square Plate Connector & Rubber Pad	2
7		M6x10 Allen Head Bolt	12
8		Allen Key	1
9		Wrench	1

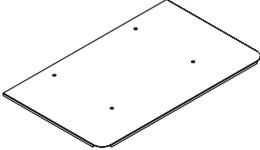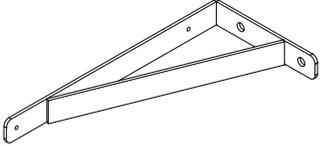No.	Picture	Description	Quantity
10		Shelf	1
11		Shelf Support	2
12		M4x6 Countersink Bolt	4

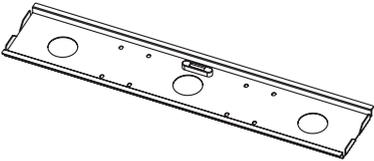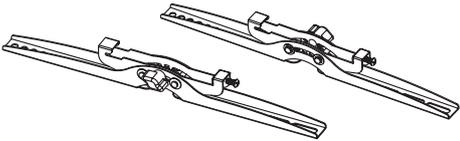   21		Square Plate	1
22		TV Arm Set	1
23		M4x12 Bolt M4x30 Bolt	4
24		M6x20 Bolt M6x35 Bolt	4
25		M8x20 Bolt M8x35 Bolt M8x45 Bolt	4
26		M4 Washer	4
27		M6 Washer	12

  No.	Picture	Description	Quantity
28		M8 Washer	4
29		M4 Spacer M6/M8 Spacer(20mm)	4
30		M6/M8 Spacer(5mm)	8

1 Use Wrench(9)

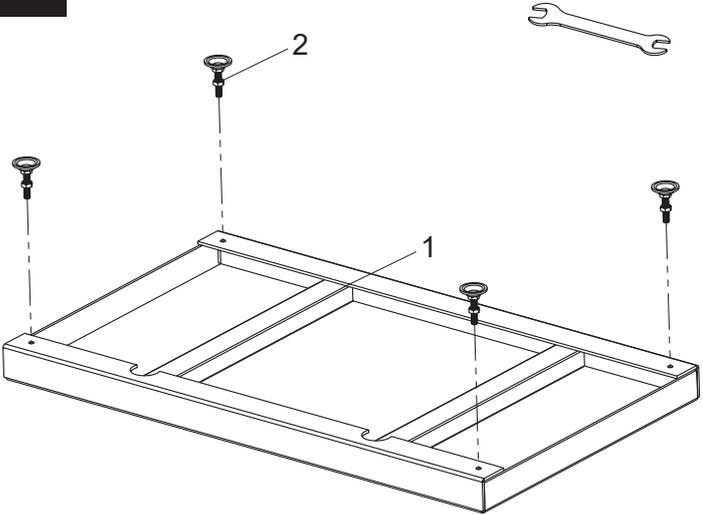


Diagram showing the base frame (1) being secured with screws (2) using a wrench (9).

2

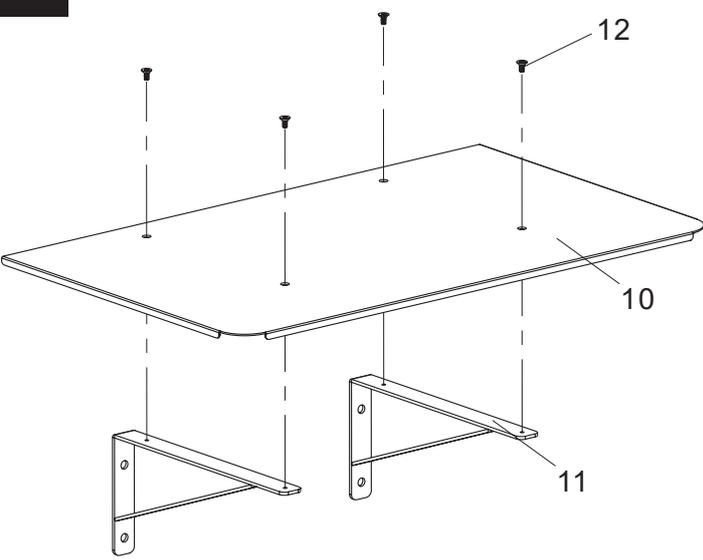


Diagram showing the top panel (10) being attached to the base frame using screws (12) and brackets (11).

3 Use Allen Key(8)

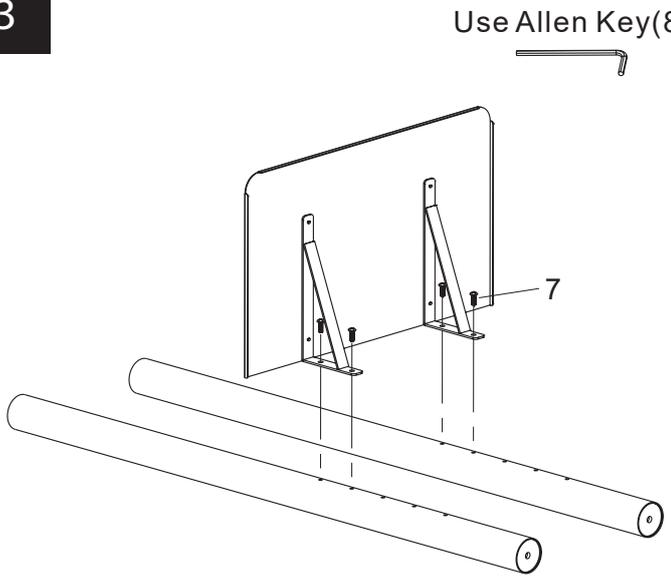


Diagram showing the side panel (7) being attached to the base frame using an Allen key (8).

4 Use Wrench(9)


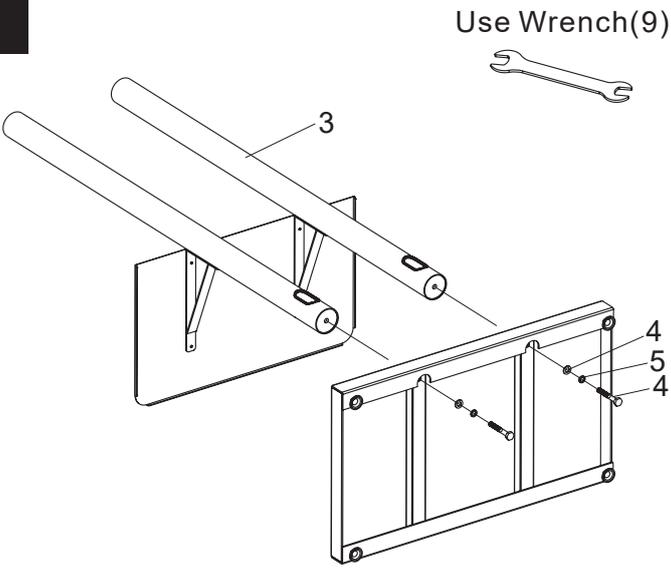


Diagram showing the top bar (3) being attached to the side panel (7) using a wrench (9) and screws (4, 5).


5




Use Allen Key(8)

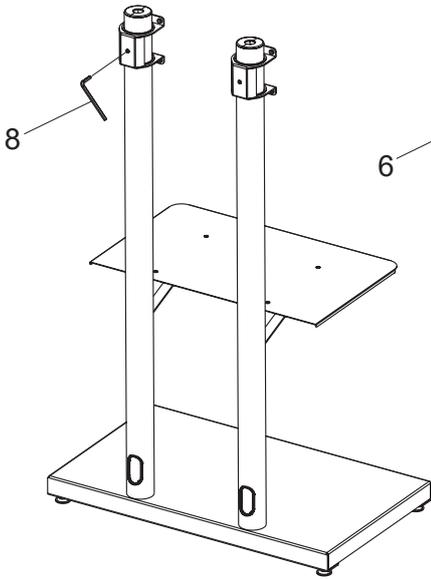

6

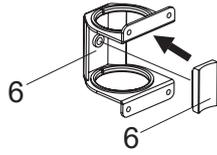


Use Allen Key(8)

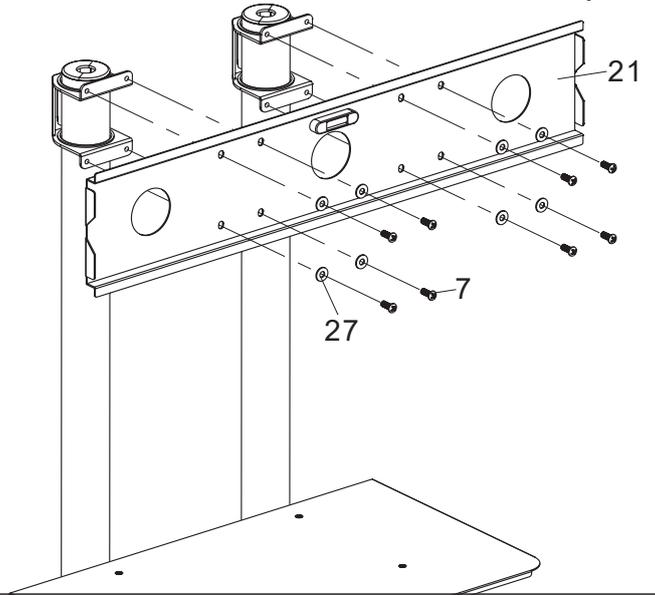


7


Level adjustment
Use Allen Key(8)

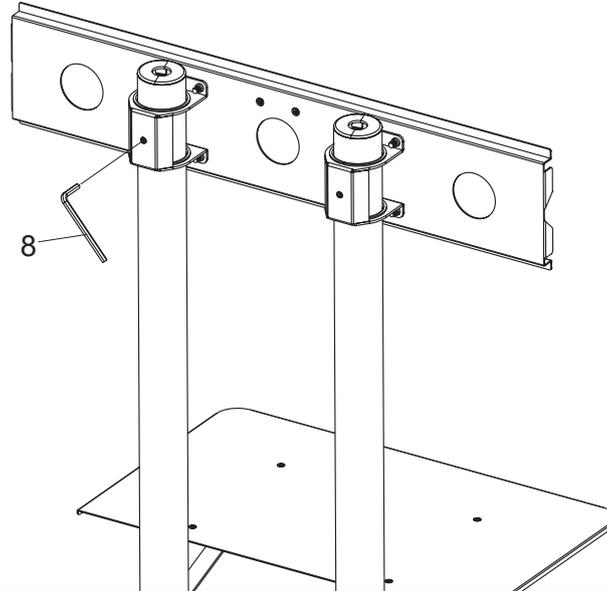


8

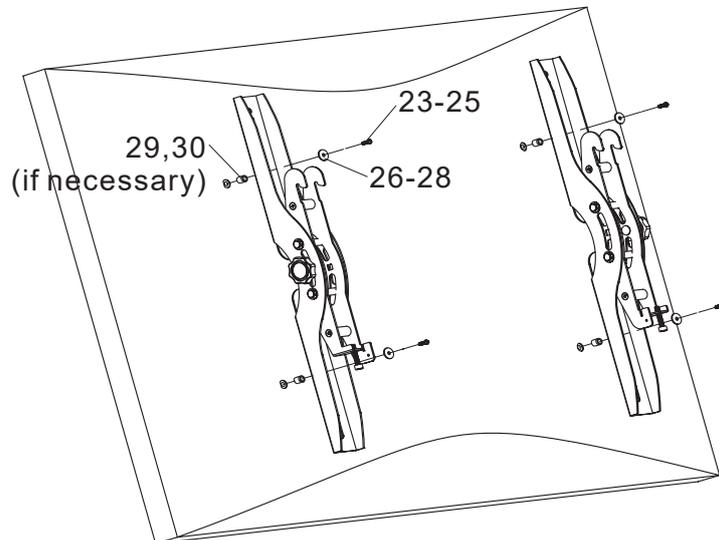

9

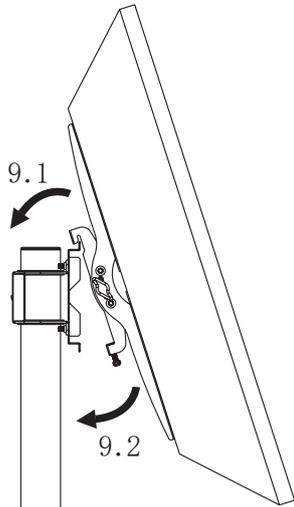


10

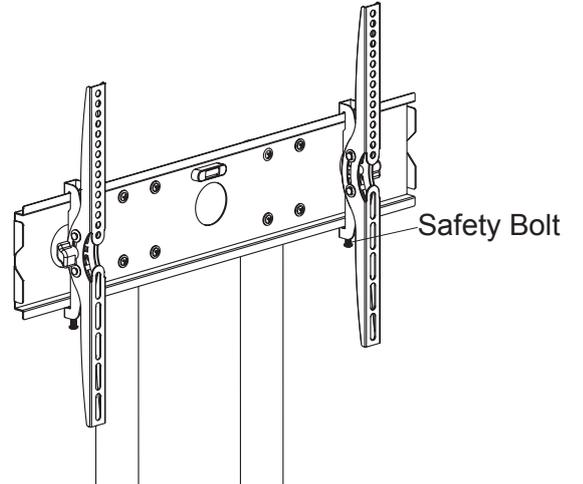


11

Adjust TV height
Use Allen Key(8)

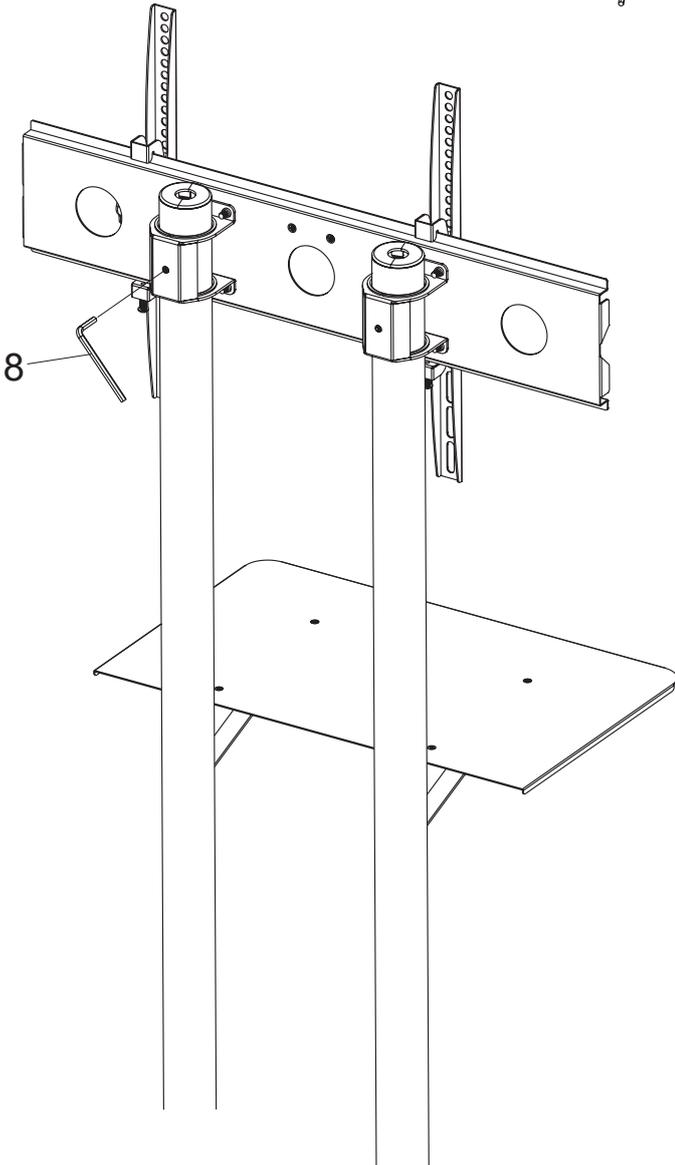


12

Adjust Shelf height
Use Allen Key(8)

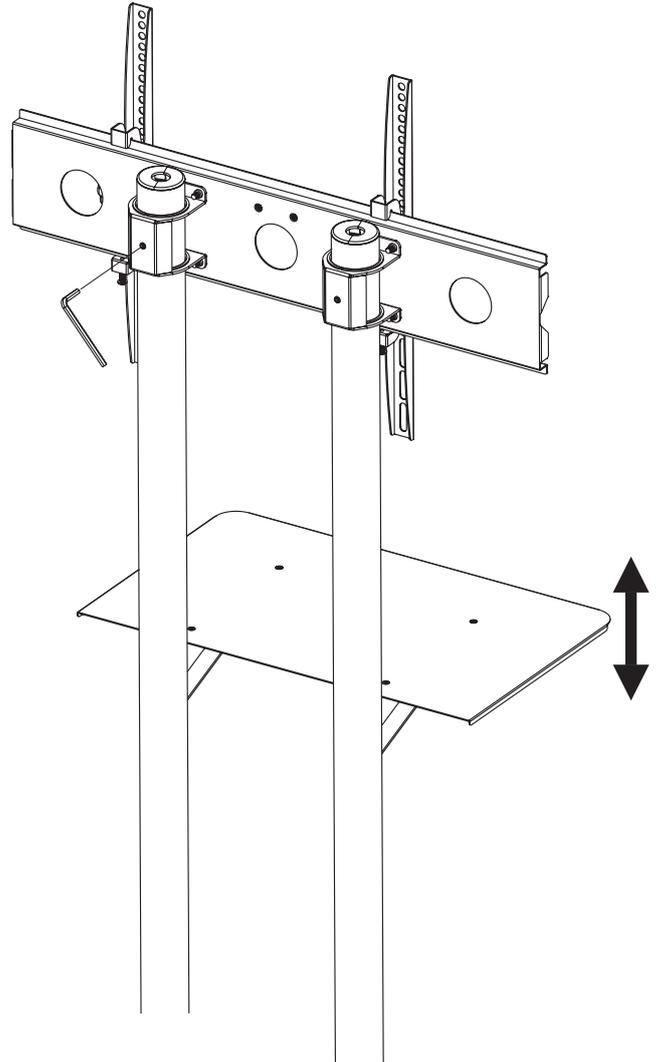

13

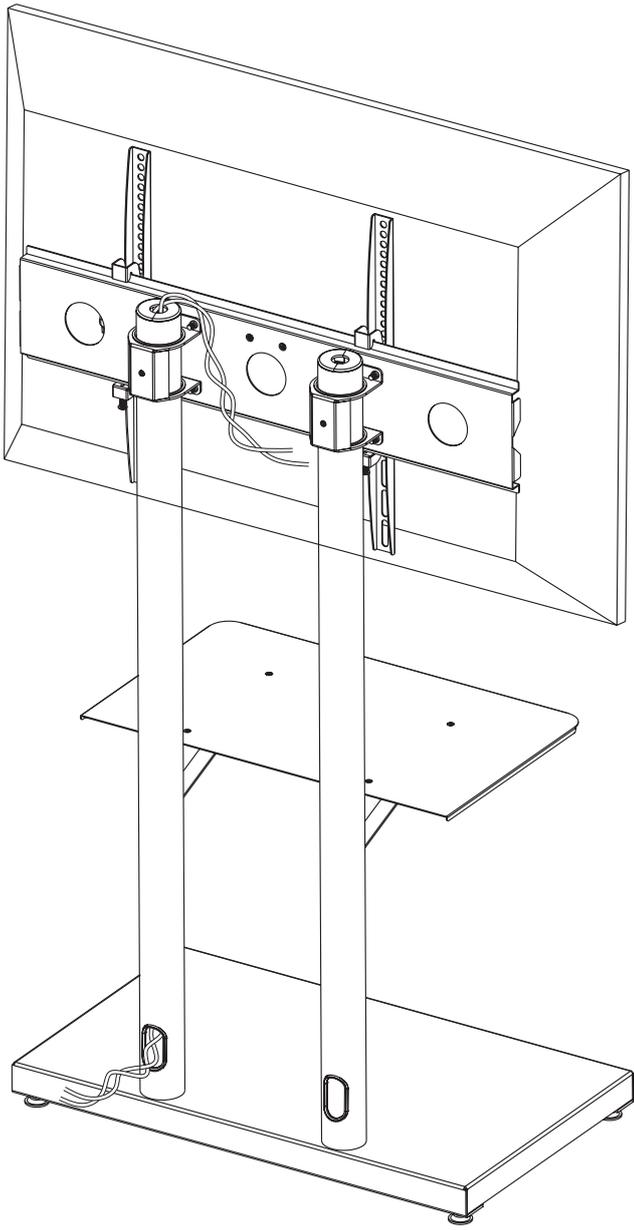

14

