


Installation Instruction

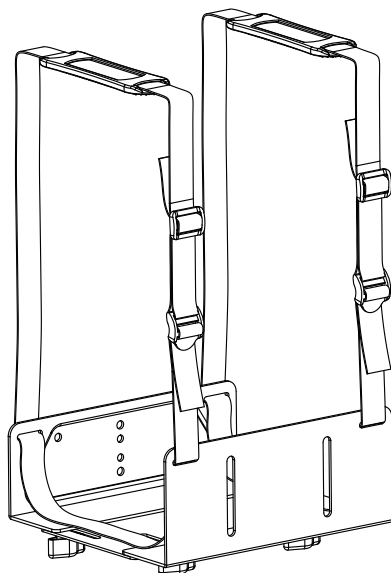

UNPACKING INSTRUCTIONS


- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION


- Install and operate this device with care. Please read this instruction before installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.
- Please call a qualified installation contractor for help if you don't understand these directions or have any doubts about the safety of the installation.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaims any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.


Supplied Parts List

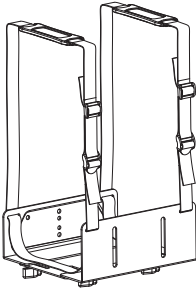


Holder x1-a



M6x45 Lag Bolt x4-b



M6x16 Screw x4-d



M8x40 Concrete Anchor x4-c




Cable Tie x2-e

Tools Required

- 3.8mm Drill Bit
- Phillips Screwdriver

- 8mm Masonry Bit
- Carpenter's Level

Step 1


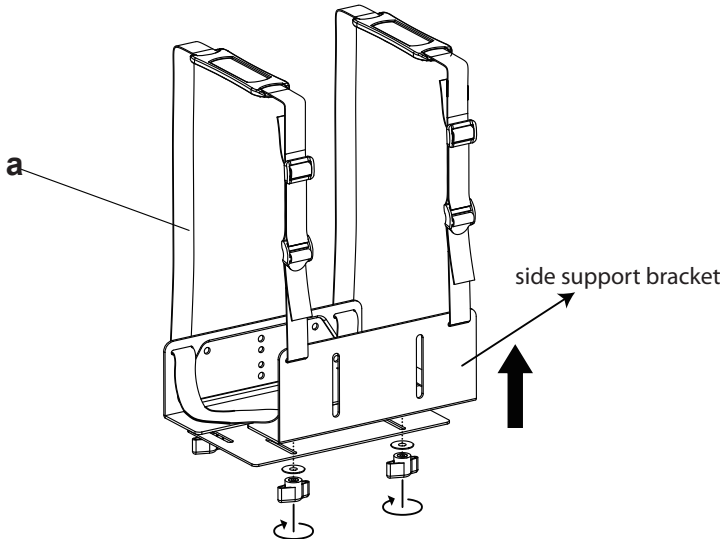


Remove two plastic knobs and dispart the side support bracket from CPU holder.



Step 2

Install the wall bracket to a wall or the sideboard of wooden desk.


Concrete/Block Wall

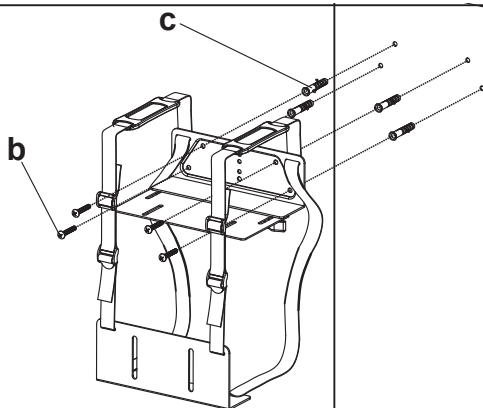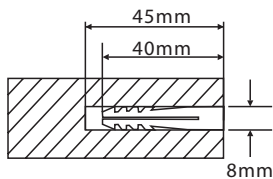


Wood Studs Wall

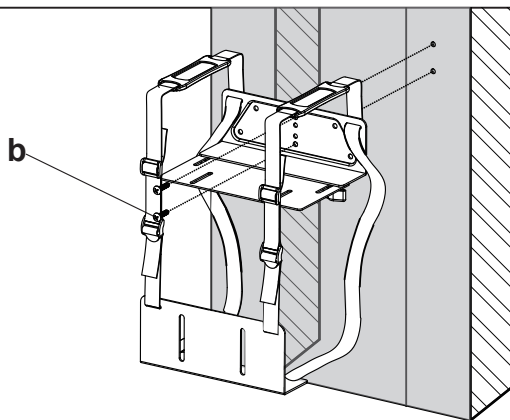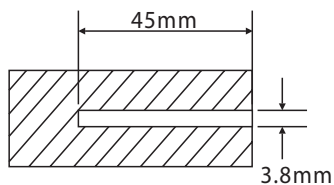

Sideboard of Wooden Desk

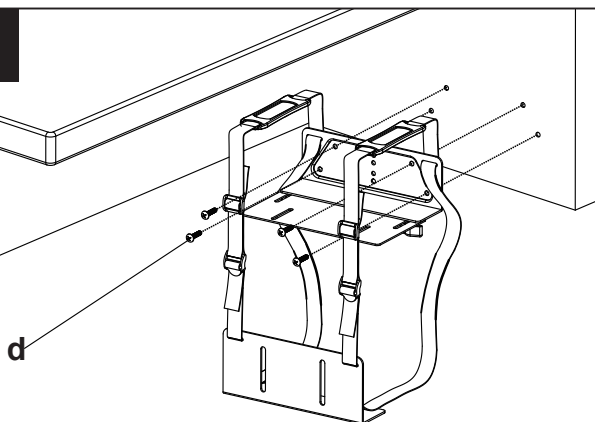


Step 3

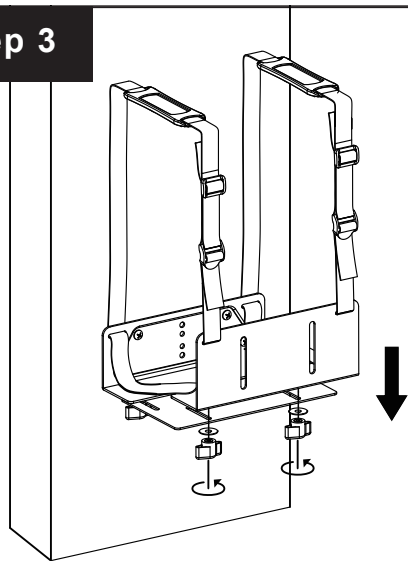


Attach the side support bracket to the CPU holder and screw on two plastic knobs. Please don't fasten them at this step.

Step 4

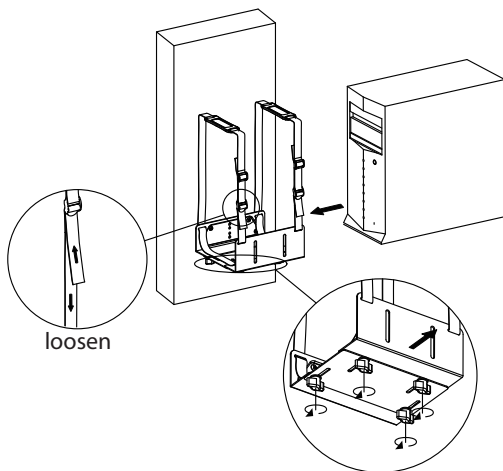

Measure the thickness of CPU. Adjust the width of CPU holder accordingly by loosening the four plastic knobs.

Step 5

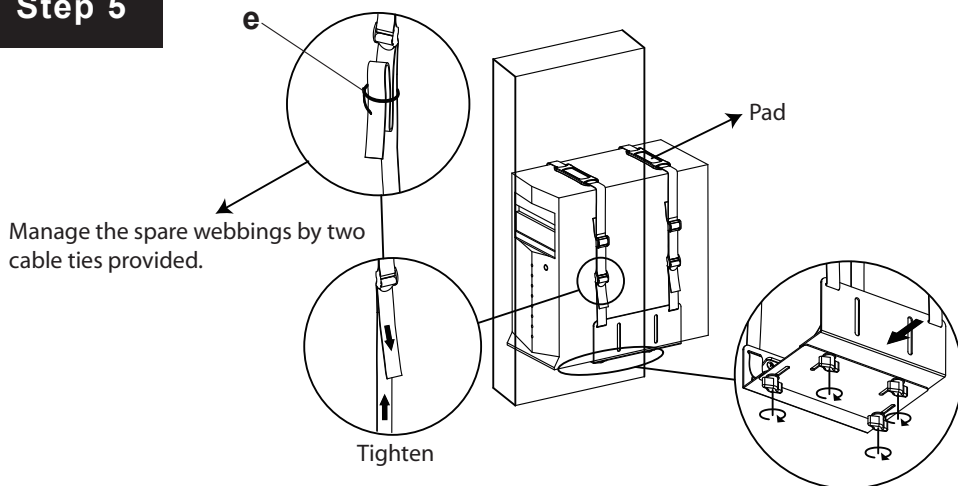

Manage the spare webbings by two cable ties provided.

Attach the CPU to the CPU holder and fasten the knobs. Fasten the webbings for additional security. Make sure the pads placed in the middle of CPU top surface.